


STANDARD LIFELINE INSTALLATION INSTRUCTIONS



1. INSTALL FIRST HANGER. ANCHOR THE OUT-BY END OF LIFELINE WITH THE SUPPLIED TENSIONING CLAMP. SEE DIAGRAM.
2. BEGIN UNROLLING LIFELINE, CLIPPING INTO SUPPLIED HANGERS EVERY 25 TO 30 FEET. (EVERY 7TH ROW OF BOLTS).
3. TENSION THE MIDWAY POINT (APPROXIMATELY 500') IN THE IN-BY DIRECTION USING ONE OF THE SUPPLIED TENSIONING CLAMPS. THEN ANCHOR THE MIDWAY POINT IN THE OUT-BY DIRECTION USING A SUPPLIED TENSIONING CLAMP AS SHOWN. SEE DIAGRAM.
4. CONTINUE INSTALLING LIFELINE UNTIL THE IN-BY END IS REACHED.
5. TENSION THE IN-BY END OF LIFELINE USING ONE OF THE SUPPLIED TENSIONING CLAMPS. SEE DIAGRAM.
6. CONNECT THE NEXT ROLL BY SCREWING THE THREADED MALE AND FEMALE CONNECTOR ENDS TOGETHER.
7. REPEAT FOR EACH CONSECUTIVE ROLL.

304-855-7080

info@minelifeline.com

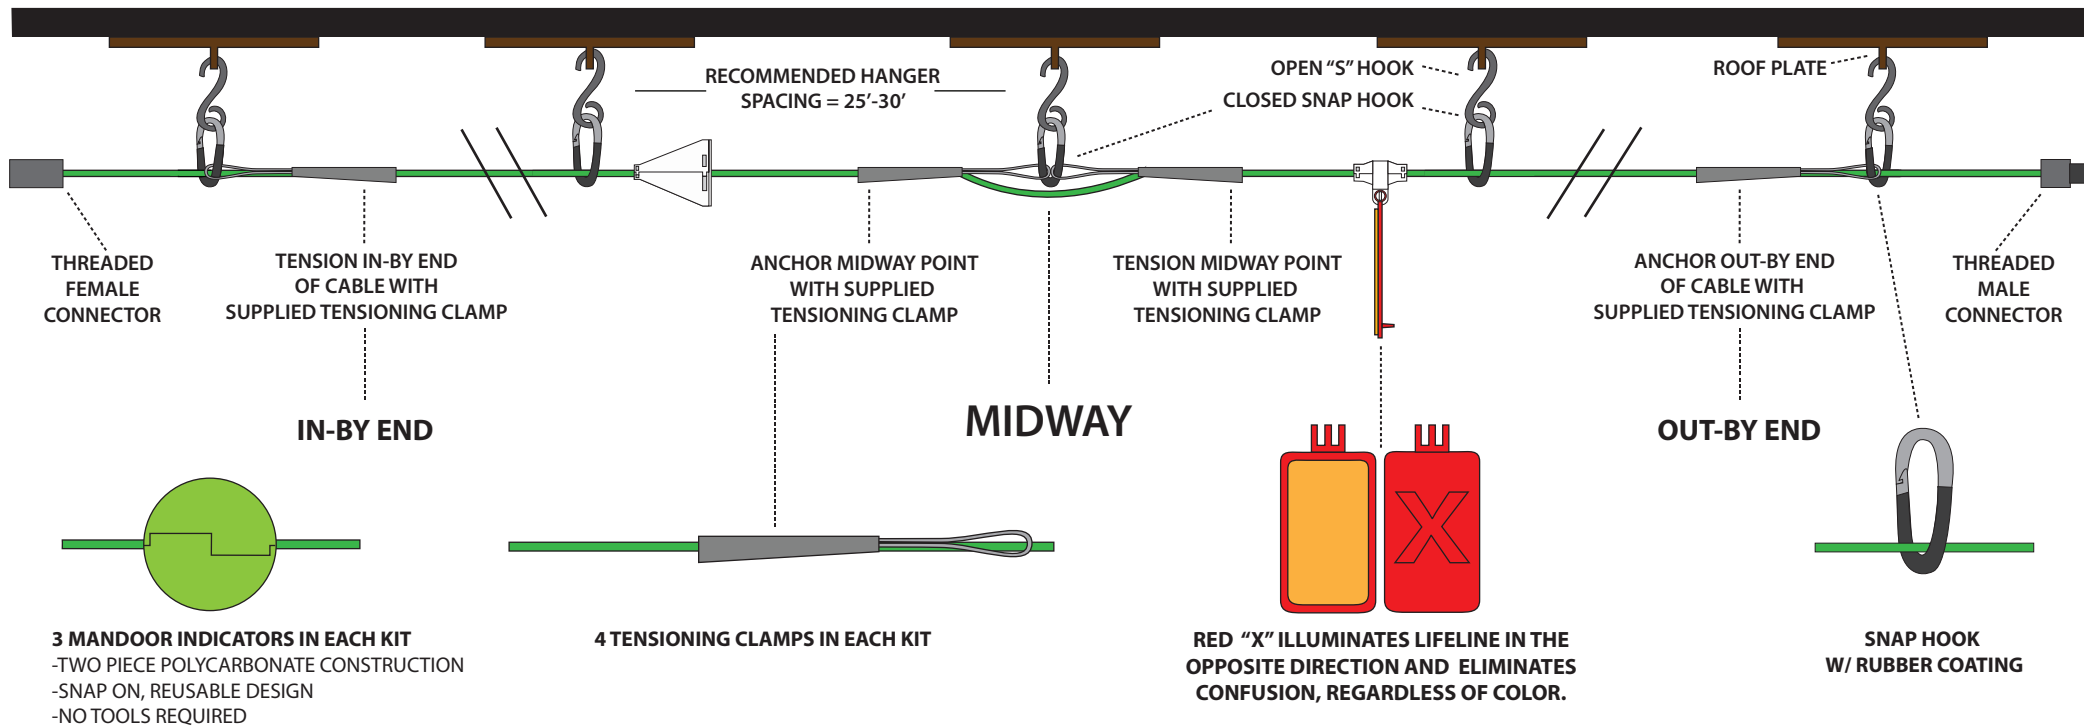

NOTES:

*LIFELINES MUST BE INSTALLED IN A MANNER FOR MINERS TO EFFECTIVELY USE DURING ESCAPE.

*ESCAPEWAYS MUST BE MAINTAINED TO A WIDTH OF 6 FEET, EXCEPT WHERE SUPPLEMENTAL ROOF SUPPORT IS INSTALLED. THEN THE MINIMUM WIDTH IS 4 FEET.

TYPICAL LIFELINE INSTALLATION USING STANDARD HANGERS