

CLAMP ON CONNECTOR W/PLUG PART#DURASPLICE

DURASPLICE INSTALLATION INSTRUCTIONS

USED TO SPLICE A BRANCH LINE (SUCH AS TO A REFUGE) ONTO AN EXISTING DURACOMM CABLE.




304-855-7080

info@minelifeline.com

INSTRUCTIONS

1. PLACE THE EXISTING DURACOMM CABLE INTO ONE SIDE OF THE BASE CONNECTOR.
2. PLACE THE BRANCH LINE INTO THE OTHER SIDE OF THE BASE CONNECTOR.
3. ALIGN THE 3-PRONGED WINGNUT PROPERLY ON THE BASE, AND TURN CLOCKWISE.
4. TIGHTEN NUT ONLY UNTIL CONTACT IS MADE AND PHONES WORK. OVER-TIGHTENING WILL CAUSE A LOSS OF CONTACT.

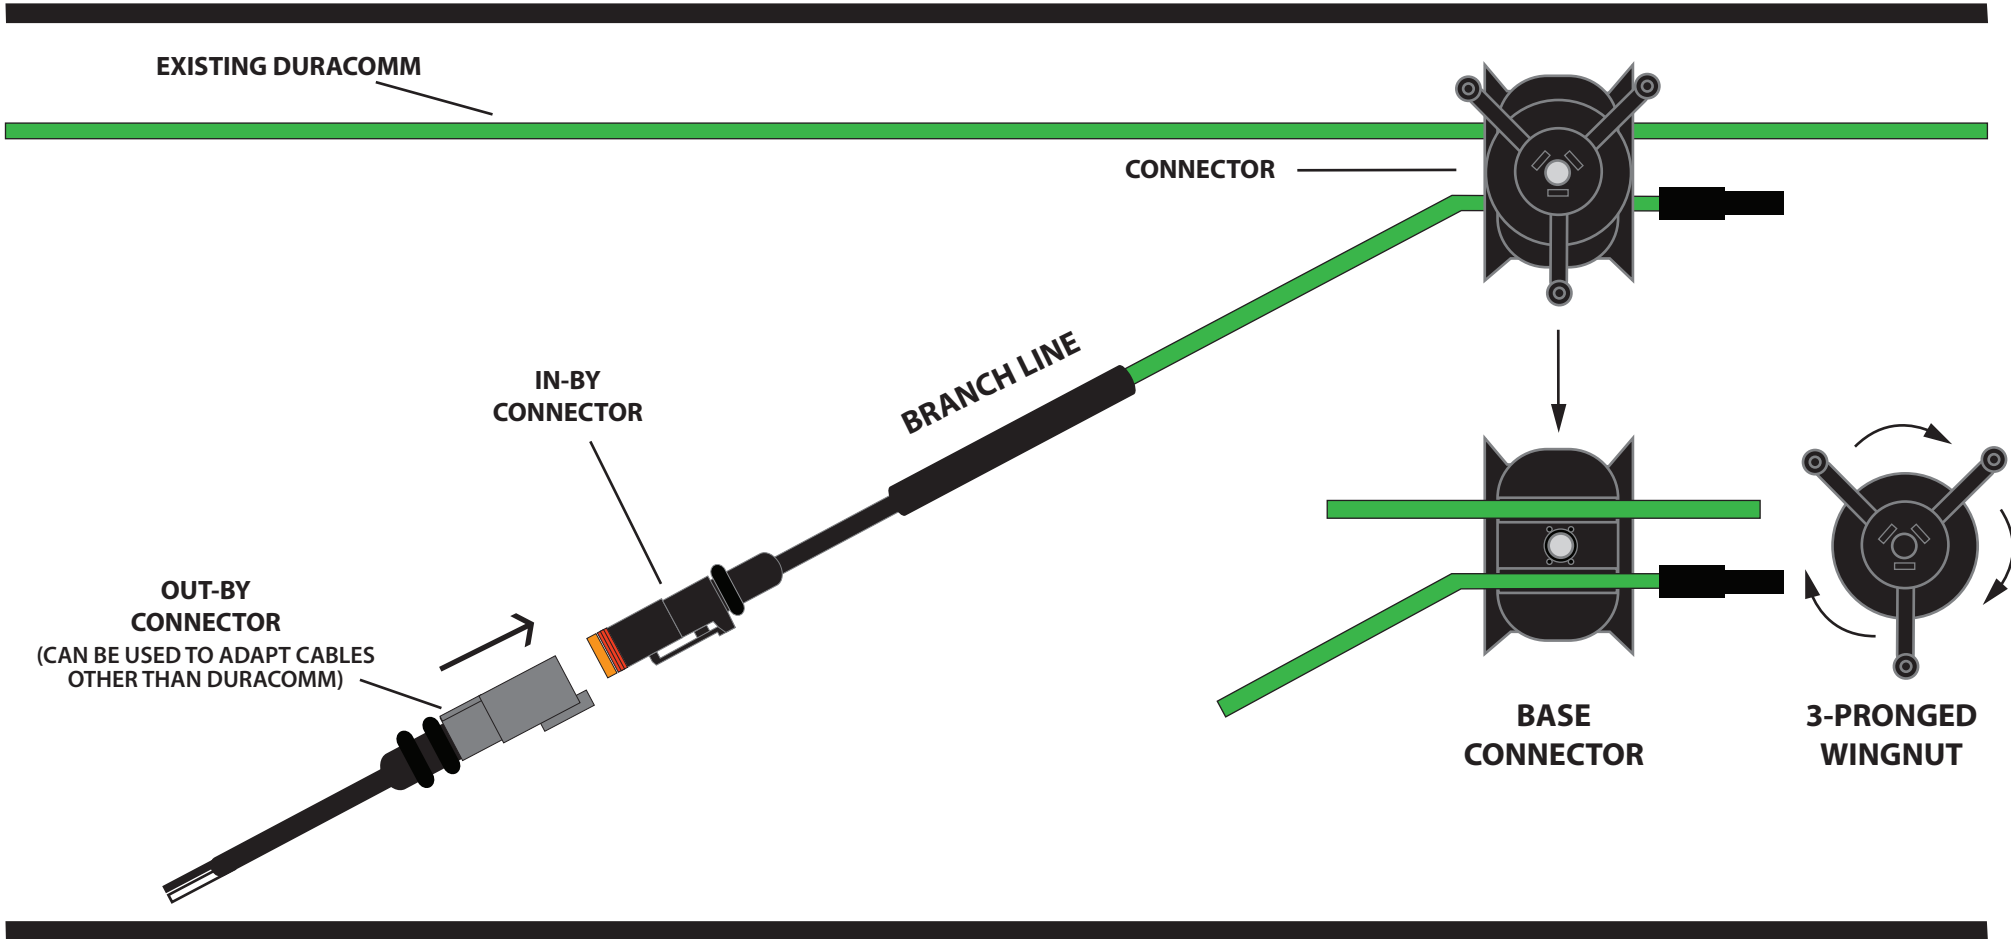

NOTES: ONCE CONNECTOR AND BRANCH LINE IS REMOVED, THERE IS NO NEED TO TAPE THE EXISTING LINE AS THE VINYL IS SELF-HEALING.